

# Platform Lifting and Lowering

SOURCE:

<https://support.zortrax.com/m200-platform-lifting-lowering/>

## Table Of Contents

Firmware Platform Lifting  
Firmware Platform Lowering  
Manual Platform Lifting  
Manual Platform Lowering

## Firmware Platform Lifting



Plug the power cable in and turn on the printer.

From the menu choose *Maintenance* and then *Move the platform up*. Keep the knob pressed to move the platform upwards.

Turn off the printer and unplug the power cable.

**DO NOT MOVE THE PLATFORM TOO HIGH. THE NOZZLE CANNOT HIT THE PERFORATED PLATE.**

## Firmware Platform Lowering



Plug the power cable in and turn on the printer.

From the menu choose *Maintenance* and then *Move the platform down*. Keep the knob pressed to move the platform to the very bottom.

Turn off the printer and unplug the power cable.

## Manual Platform Lifting



Turn off the printer and unplug the power cable.

To lift the platform, hold the heatbed mount on both sides next to the Z-axis rails and push it upwards.

It is also possible to lift the platform manually by turning the Z-axis screw clockwise.

## Manual Platform Lowering



Turn off the printer and unplug the power cable.

To lower the platform, hold the heatbed mount on both sides next to the Z-axis rails and push it downwards.

It is also possible to lower the platform manually by turning the Z-axis screw anticlockwise.