

HEPA Filter Replacement

SOURCE:

<https://support.zortrax.com/hepa-filter-replacement/>

Table Of Contents

Unplugging the Power Cable
Filter Cover Removal
HEPA Filter Removal
HEPA Filter Installation
Filter Cover Installation

The HEPA filter is a type of air filter composed of dense glass fibers placed at the back of the Inventure. It removes vapors of the melted plastic from the air that passes through the chamber. Thanks to that, the Inventure can be used in any office environment. The filter should be replaced at least every twelve months.

Unplugging the Power Cable


Turn off the printer and unplug the power cable.



Filter Cover Removal

Unscrew the screw securing the filter cover.



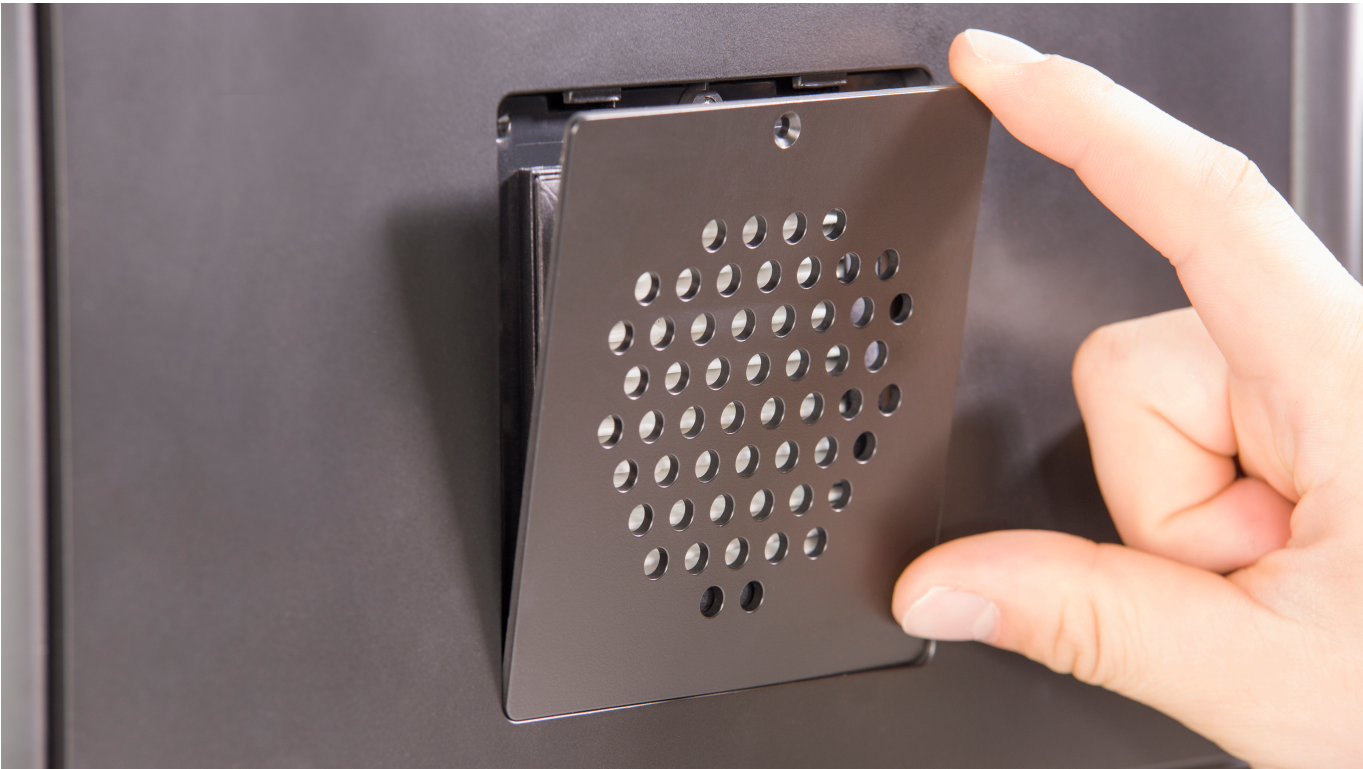

HEPA Filter Removal

Remove the HEPA filter.





HEPA Filter Installation

Insert a new HEPA filter in its place.





Filter Cover Installation

Place the filter cover in its place and secure it with the screw.

