

Heatbed Cable Replacement

SOURCE:

<https://support.zortrax.com/m200-plus-heatbed-cable-replacement/>

Table Of Contents

Unplugging the Power Cable

Unplugging the Heatbed Cable (from the Z-axis Cover)

Platform Removal

Unplugging the Heatbed Cable (from the Platform)

Plugging the Heatbed Cable (into the Platform)

Platform Installation

Plugging the Heatbed Cable (into the Z-axis Cover)

Plugging the Power Cable

Unplugging the Power Cable



Turn off the printer and unplug the power cable.

Unplugging the Heatbed Cable (from the Z-axis Cover)



Unplug the heatbed cable from the Z-axis cover.

Platform Removal



Remove the platform with the heatbed cable from the printer.

Unplugging the Heatbed Cable (from the Platform)



Unplug the heatbed cable from the platform.

Plugging the Heatbed Cable (into the Platform)



Plug the new heatbed cable into the platform.

Platform Installation



Pass the heatbed cable behind the heatbed mount and install the platform back in the printer.

Plugging the Heatbed Cable (into the Z-axis Cover)



Plug the heatbed cable into the Z-axis cover.

Plugging the Power Cable



Plug the power cable in.