

# Material Endstop Replacement

SOURCE:

<https://support.zortrax.com/material-endstop-replacement/>



## Table Of Contents

Unloading the Material  
Unplugging the Power Cable  
Material Guide Removal  
Unscrewing the Material Endstop  
Material Endstop Removal  
Material Endstop Installation  
Securing the Material Endstop  
Material Guide Installation  
Plugging the Power Cable

## Unloading the Material

To unload the material, open the Tools menu and select “Material” and “Unload material.” Wait until the extruder heats up and select “Continue” to confirm.



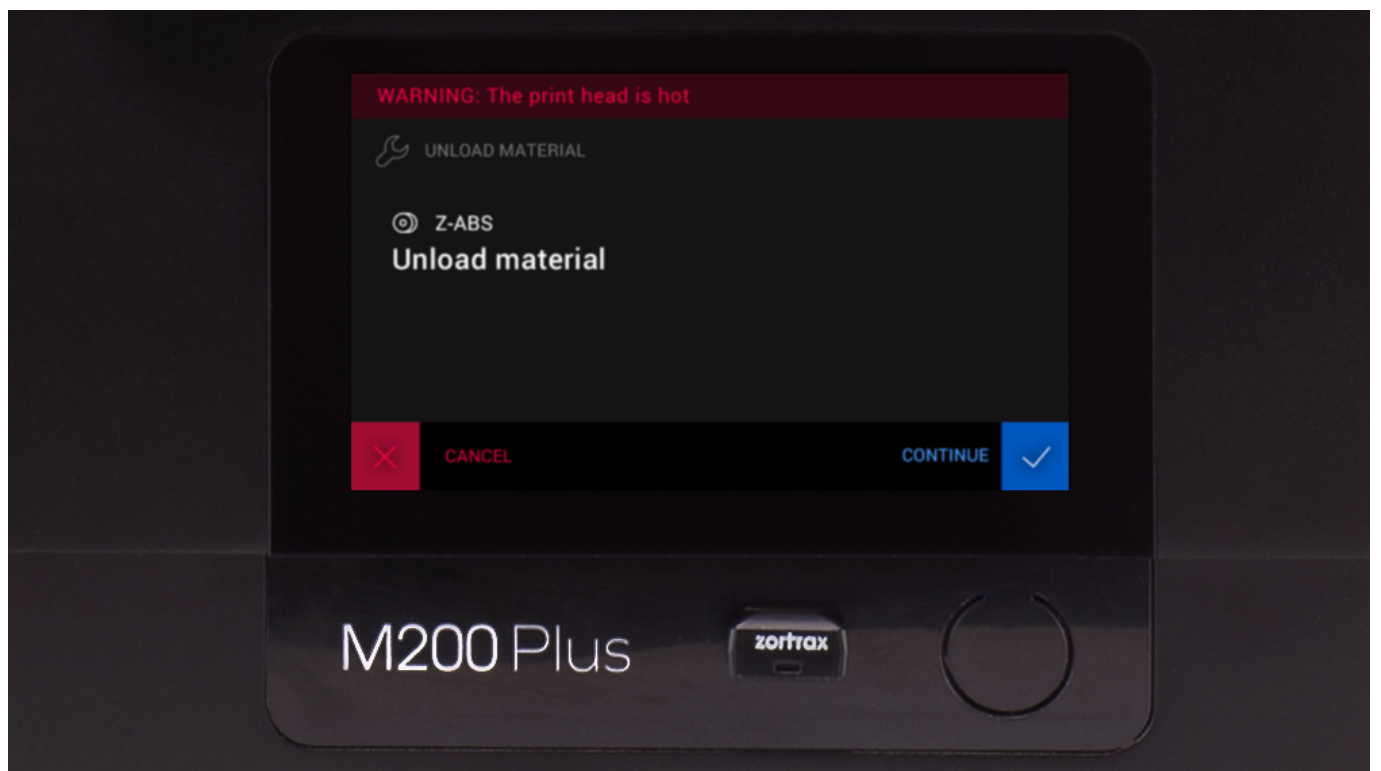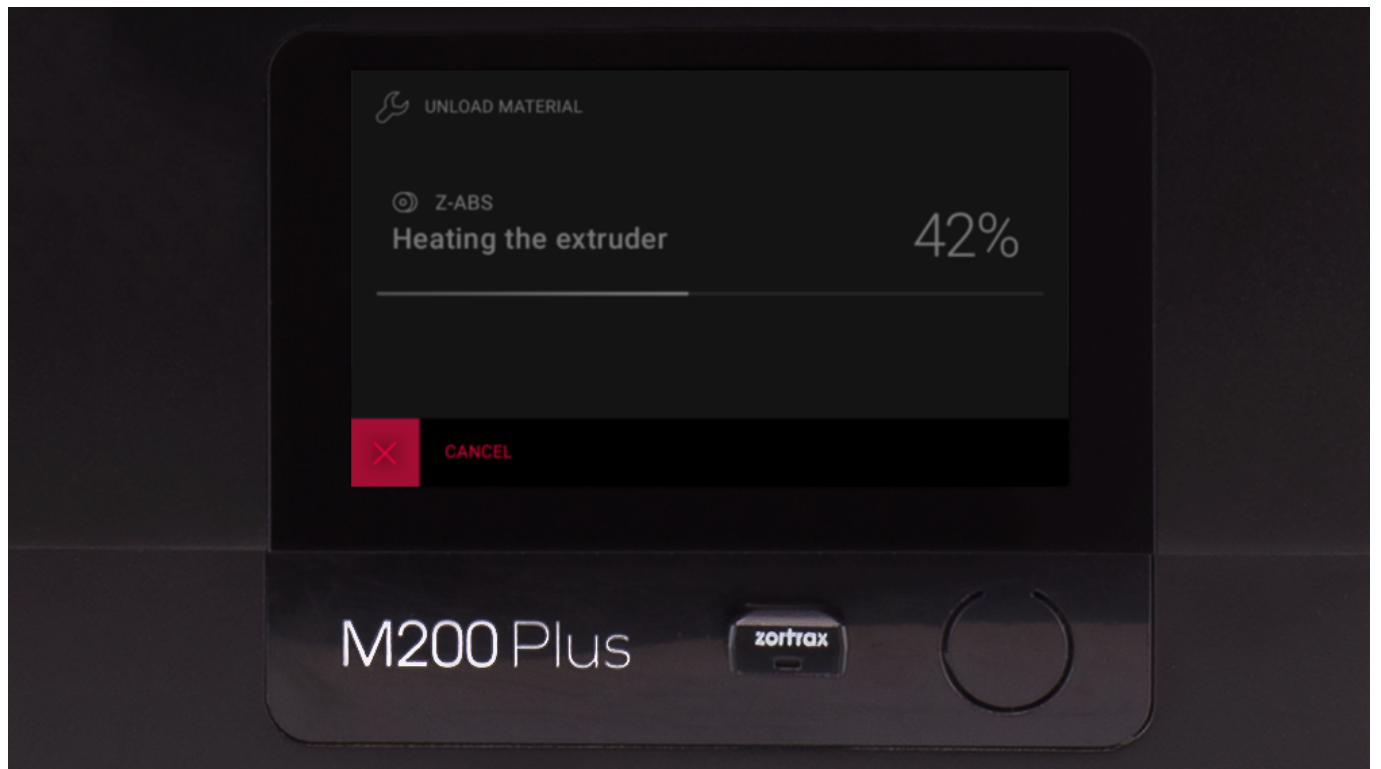



To complete the procedure, remove the material from the endstop placed at the back of the printer and select “Done.”




## Unplugging the Power Cable




Turn off the printer and unplug the power cable.

## Material Guide Removal

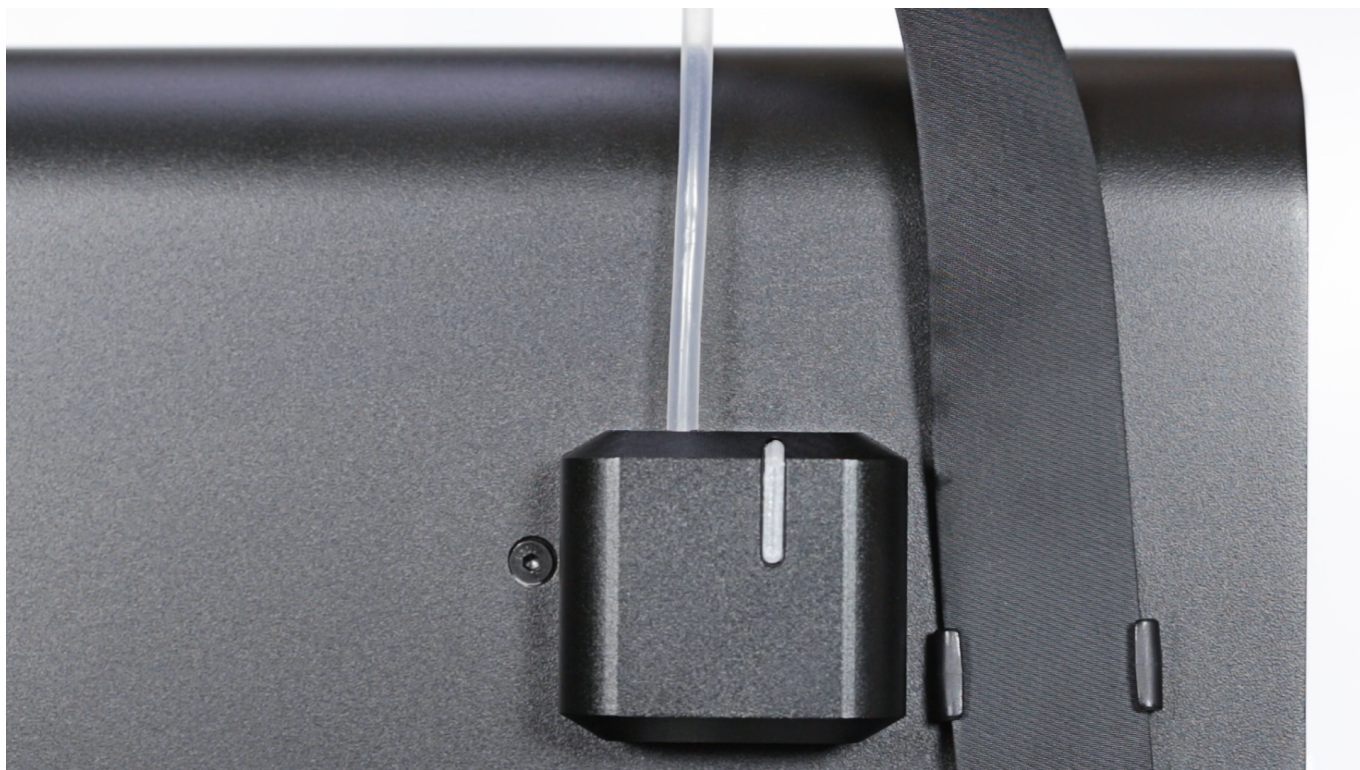

Remove the material guide from the material endstop.

## Unscrewing the Material Endstop

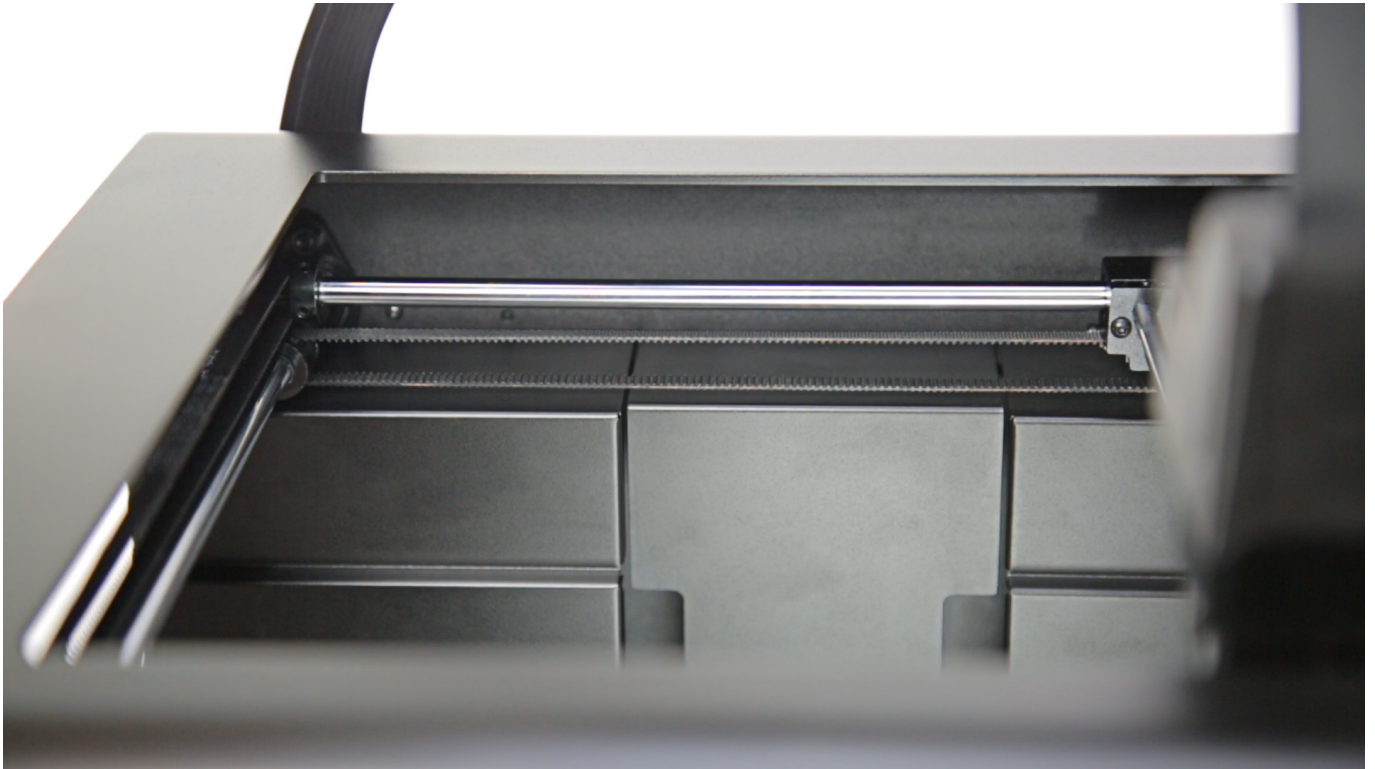

Unscrew one screw that secures the material endstop in the printer's frame.



## Material Endstop Removal




Remove the material endstop from the printer's frame. Unplug the endstop cable.

## Material Endstop Installation



Prepare the new material endstop and plug in the cable. Attach the endstop to the printer's frame.

## Securing the Material Endstop

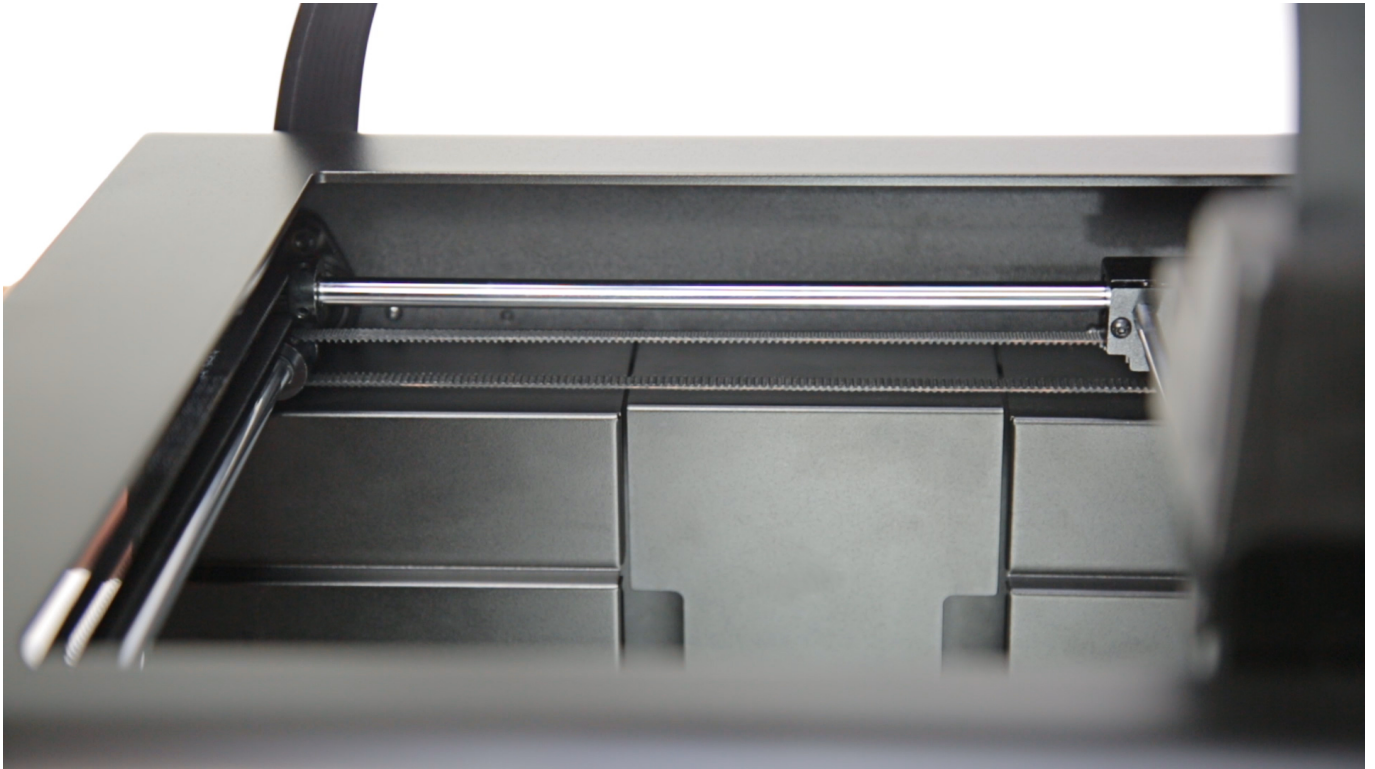

Secure the material endstop with the screw.



## Material Guide Installation



Attach the material guide to the endstop.

## Plugging the Power Cable



Plug the power cable in.