

Spool Holder Installation

SOURCE:

<https://support.zortrax.com/spool-holder-installation/>


Table Of Contents

Preparing the Model


Holder Installation

Spool Installation & Material Loading

Preparing the Model

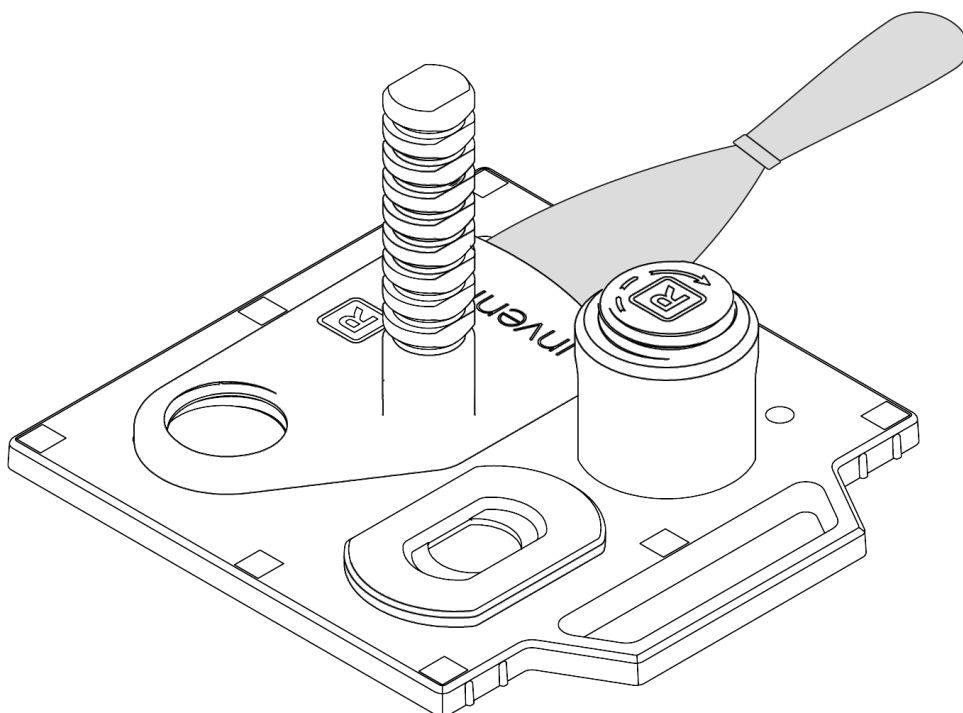


Download and print the three pieces of the holder. The .stl files are available in the [Zortrax Library](#).

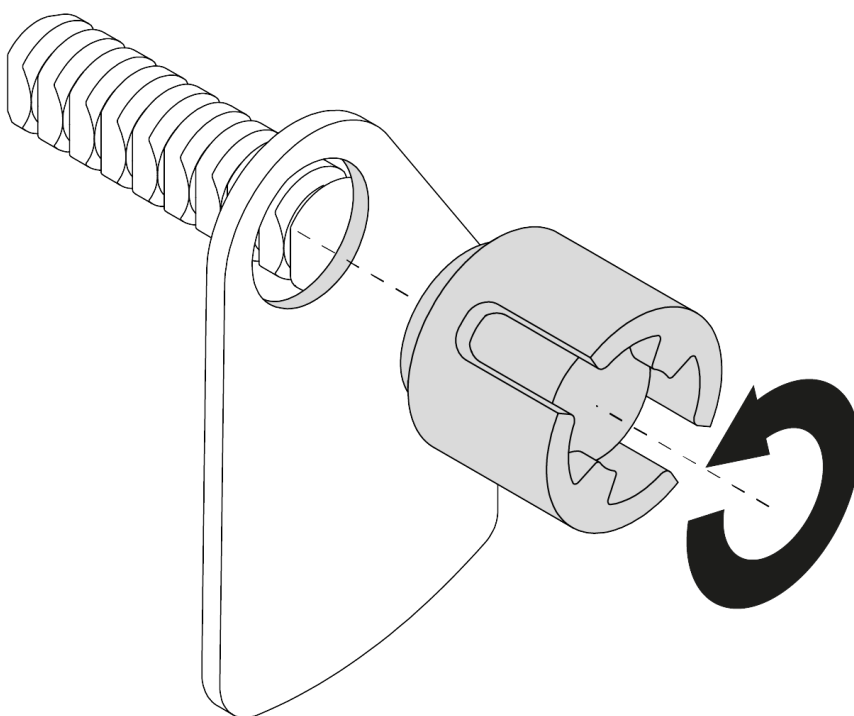


Screw the mount piece into the holder (see the arrow on the mount piece for directions).

Holder Installation

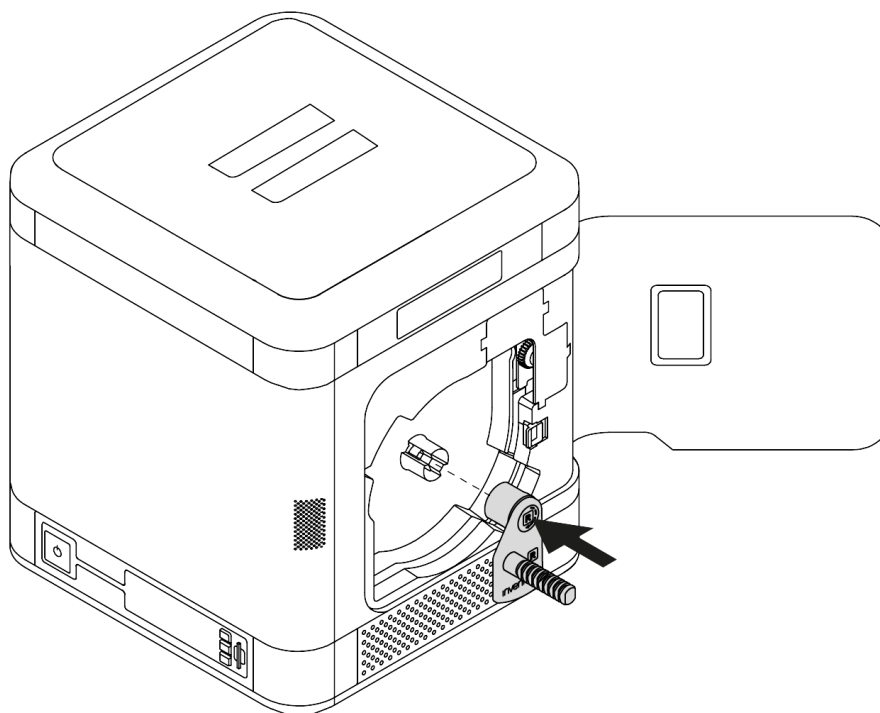


Open the right door by pressing the release buttons. Insert the holder into the slot.


Spool Installation & Material Loading

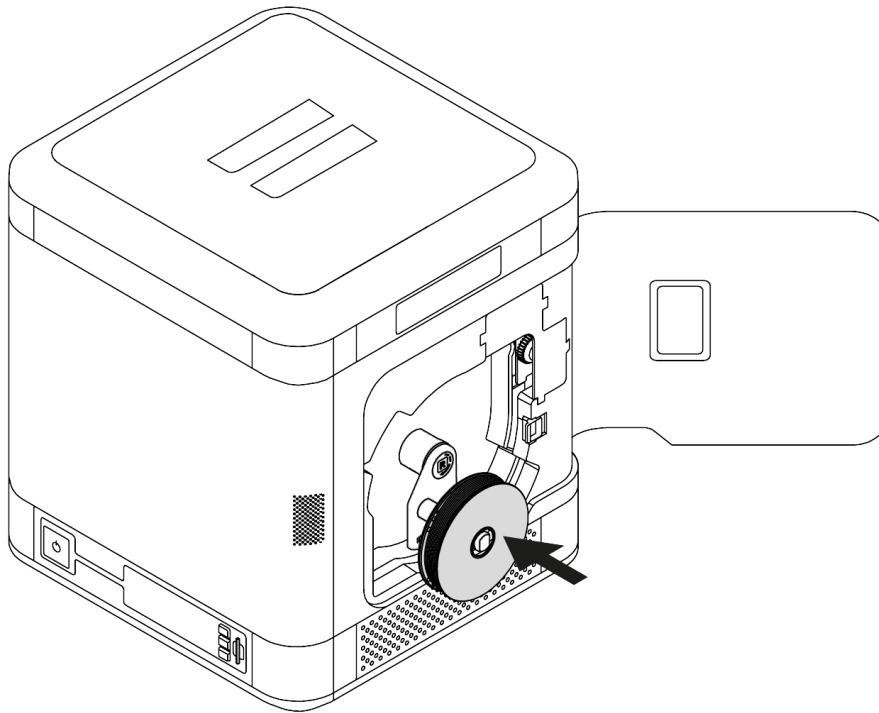

Place the spool on the holder. The spool should rotate anti-clockwise.

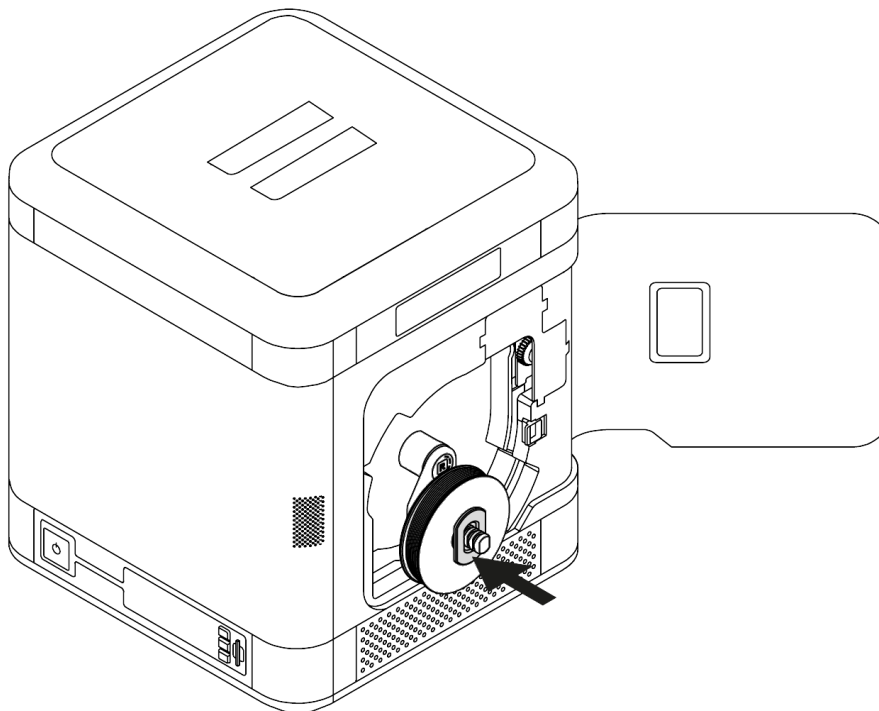

Insert the stopper onto the holder.

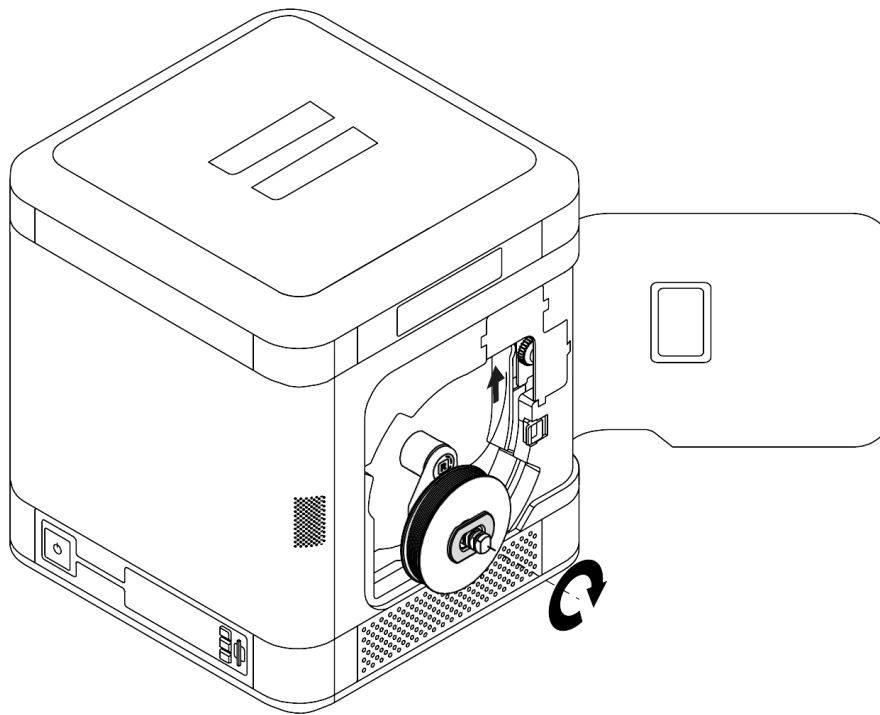

Turn the stopper to the right to secure the spool.

Next, insert the material into the feeder and start the loading process using options from the menu.