

# Disassembling the Cartridge

SOURCE:

<https://support.zortrax.com/disassembling-the-cartridge/>

## Table Of Contents

Removing the Cartridge Plate  
Opening the Cartridge  
Removing the Spool  
Removing the Sprocket Wheel

## Removing the Cartridge Plate



Use pliers to remove the metal cover that secures the cartridge inlet.

## Opening the Cartridge

Unscrew the five screws that hold the cartridge casing together and open it.









## Removing the Spool

Remove the spool together with the gasket and the sprocket wheel.





## Removing the Sprocket Wheel

Separate the end of the material from the gasket and the sprocket wheel.

