

Motherboard Replacement

SOURCE:

<https://support.zortrax.com/m200-motherboard-replacement/>

Table Of Contents

Unplugging the Power Cable
Changing the Printer's Position
Unscrewing the Bottom Plate, part 1
Turning the Printer
Unscrewing the Bottom Plate, part 2
Separating the Bottom Plate
Unplugging all Cables from the Motherboard
Motherboard Removal
Motherboard Assembly
Plugging all the Cables into the Motherboard
Bottom Plate Installation
Securing the Bottom Plate, part 1
Turning the Printer
Securing the Bottom Plate, part 2
Changing the Printer's Position
Plugging the Power Cable

The motherboard is the main printed circuit board which allows communication between all other components of the printer. It is placed under the bottom plate, along with the cooling fan and power supply unit. Any motherboard failure may create problems with other components and the printer may not properly perform. If, for example, your printer is overheating, or it starts to run but there is nothing displayed on the front panel, or it suddenly turns off during the printing process and cannot be restarted, it may indicate the motherboard failure. At first, you have to determine whether the problem is not caused by a specific component. If you've eliminated other possible causes, for example, the display panel, power supply unit or fuse failure, you should replace the motherboard. Follow the steps from this manual to see how to properly carry out the whole procedure.

Unplugging the Power Cable



Turn off the printer and unplug the power cable.

Changing the Printer's Position



Grab the printer's housing and change the printer's position so that you can easily access the bottom plate.

Unscrewing the Bottom Plate, part 1



Unscrew the screws that secure the bottom plate on one side of the housing. Use a 2.5mm Allen key.

Turning the Printer



Turn the printer over.

Unscrewing the Bottom Plate, part 2




Unscrew the screws that secure the bottom plate on the other side of the housing. Use the same key.

Separating the Bottom Plate



Separate the bottom plate from the printer and unplug the bottom fan cable from the motherboard.


Unplugging all Cables from the Motherboard

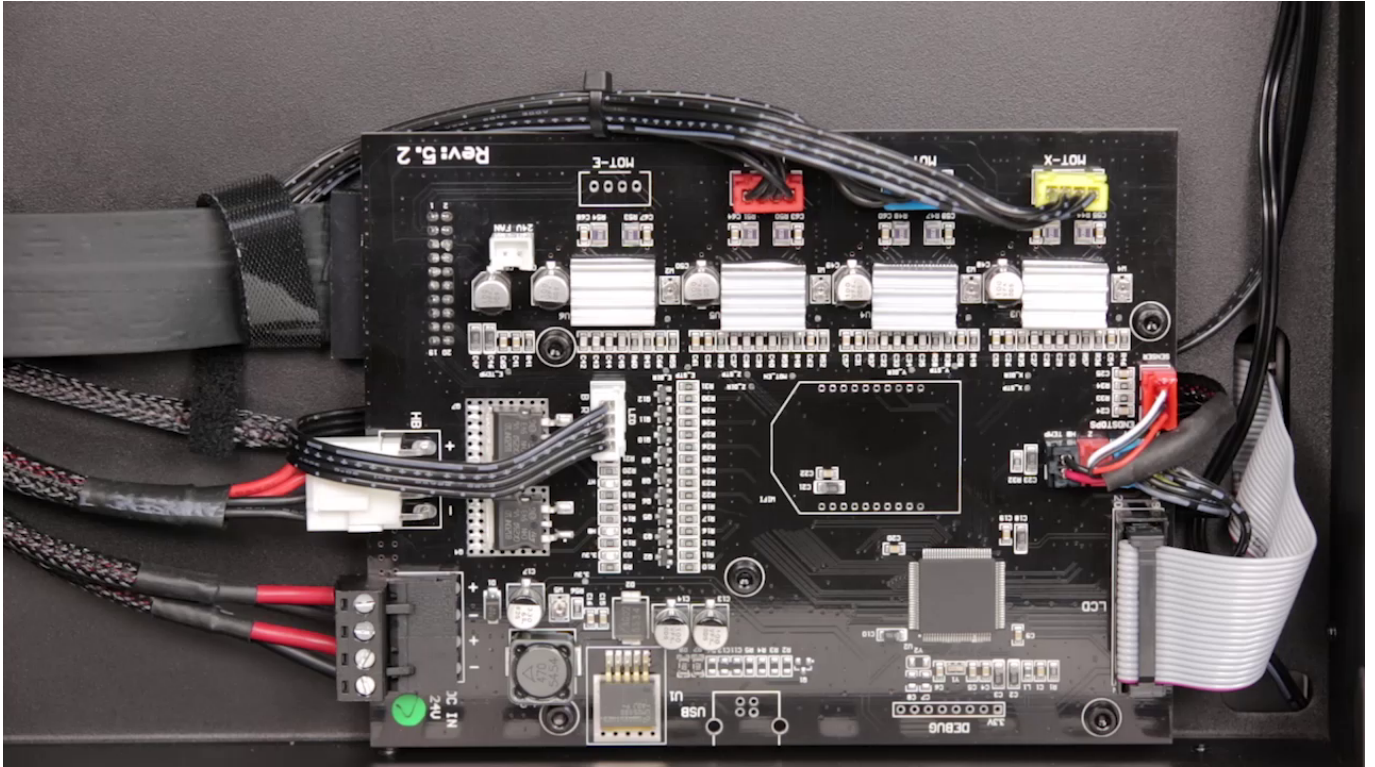

Unplug all the cables from the motherboard.


The video shows the new version of the motherboard. Prior versions of the motherboard may look slightly different.

Motherboard Removal

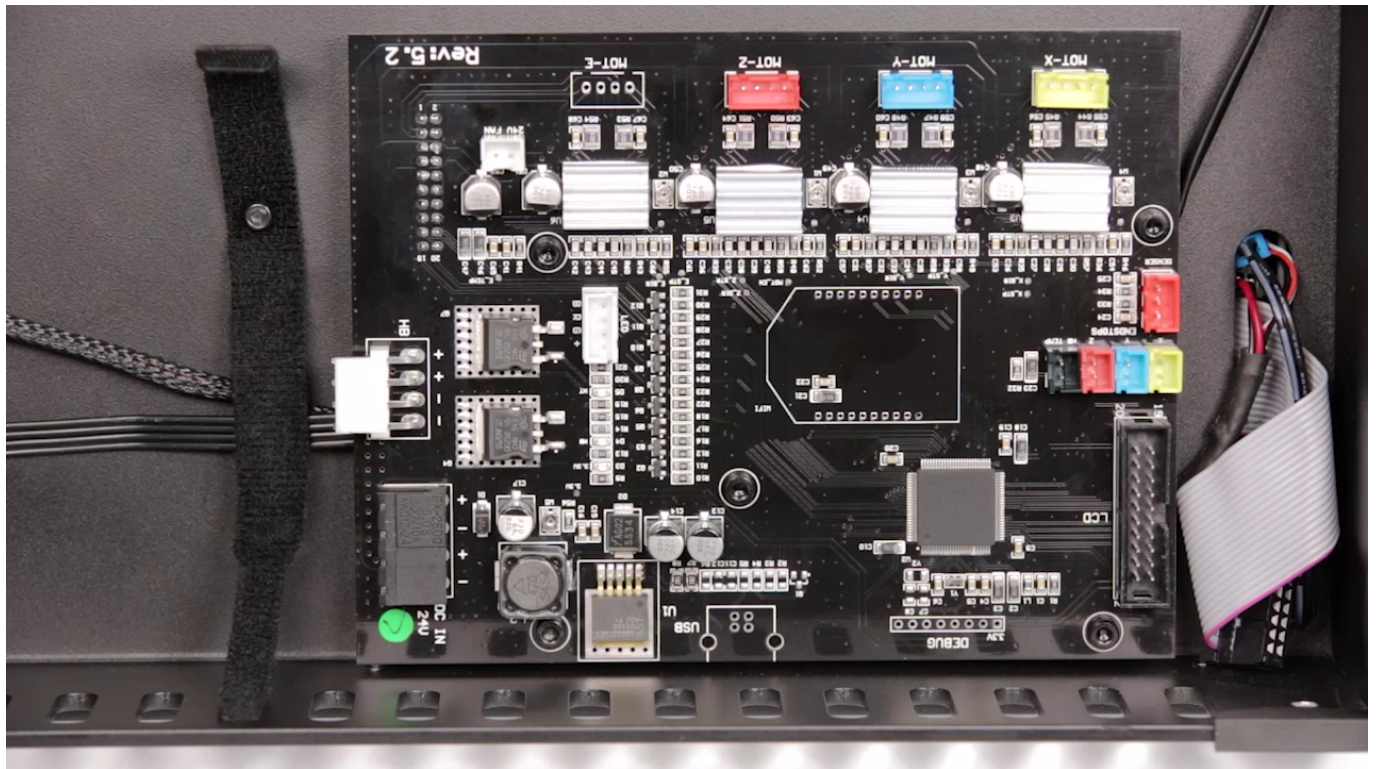


Unscrew the five screws that secure the motherboard using a 2.5mm Allen key and remove the motherboard from the printer.

Motherboard Assembly

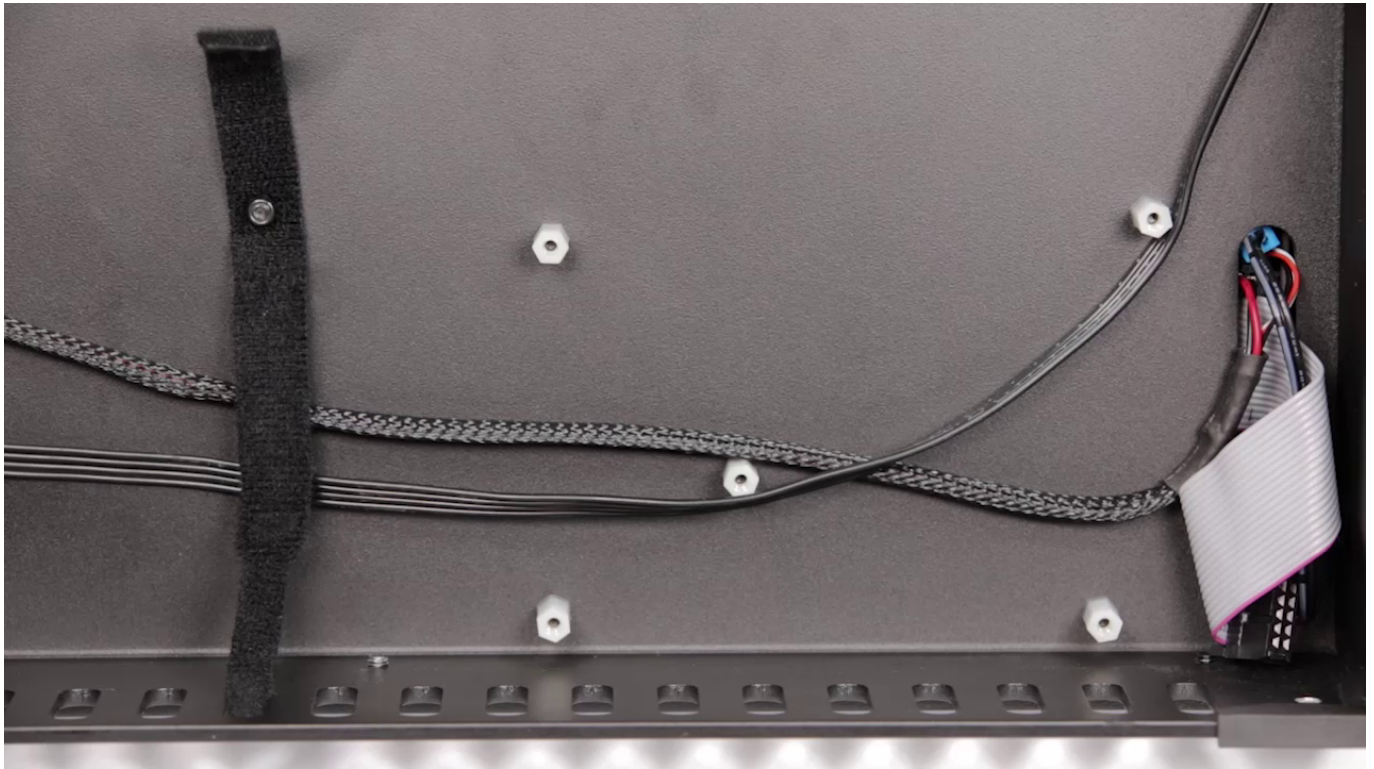

Install the new motherboard in its place and secure it with the five screws.

Plugging all the Cables into the Motherboard

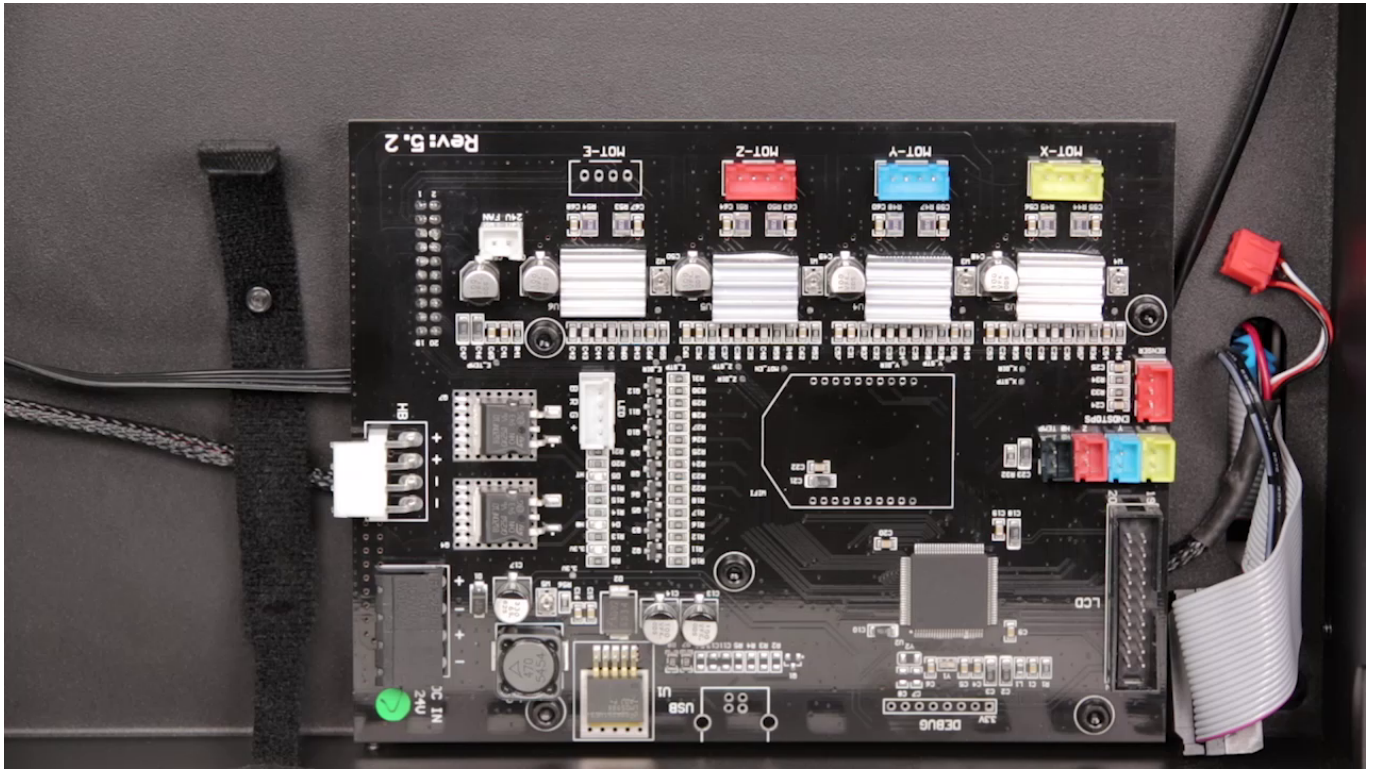

Plug all the cables into the motherboard.

Bottom Plate Installation



Plug the bottom fan cable into the motherboard and install the bottom plate.

Securing the Bottom Plate, part 1



Screw the bottom plate on one side of the housing. Use a 2.5mm Allen key.

Turning the Printer




Turn the printer over.

Securing the Bottom Plate, part 2



Screw the bottom plate on the other side of the housing. Use the same key.

Changing the Printer's Position

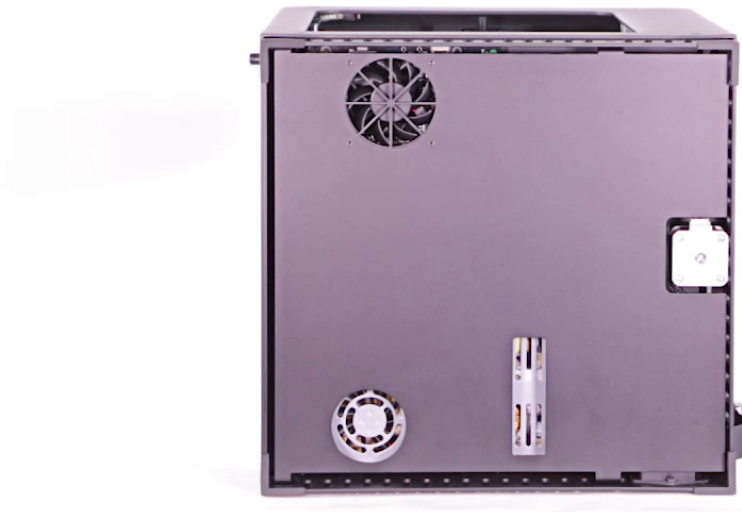

Grab the printer's housing and set the printer upright.

Plugging the Power Cable



Plug the power cable in.