

# Model Cleaning

SOURCE:

<https://support.zortrax.com/inkspire-model-cleaning/>

## Table Of Contents

Ultrasonic Cleaner  
Cleaning Box

# Ultrasonic Cleaner




Put the platform with the model in the Ultrasonic Cleaner and turn on the device.

CLEANING TIME DEPENDS ON THE SIZE OF THE MODEL BUT IT SHOULDN'T EXCEED THREE MINUTES. LONGER CLEANING TIME CAUSES THE LIQUID TO HEAT UP.




Turn off the Ultrasonic Cleaner and remove the platform with the model.

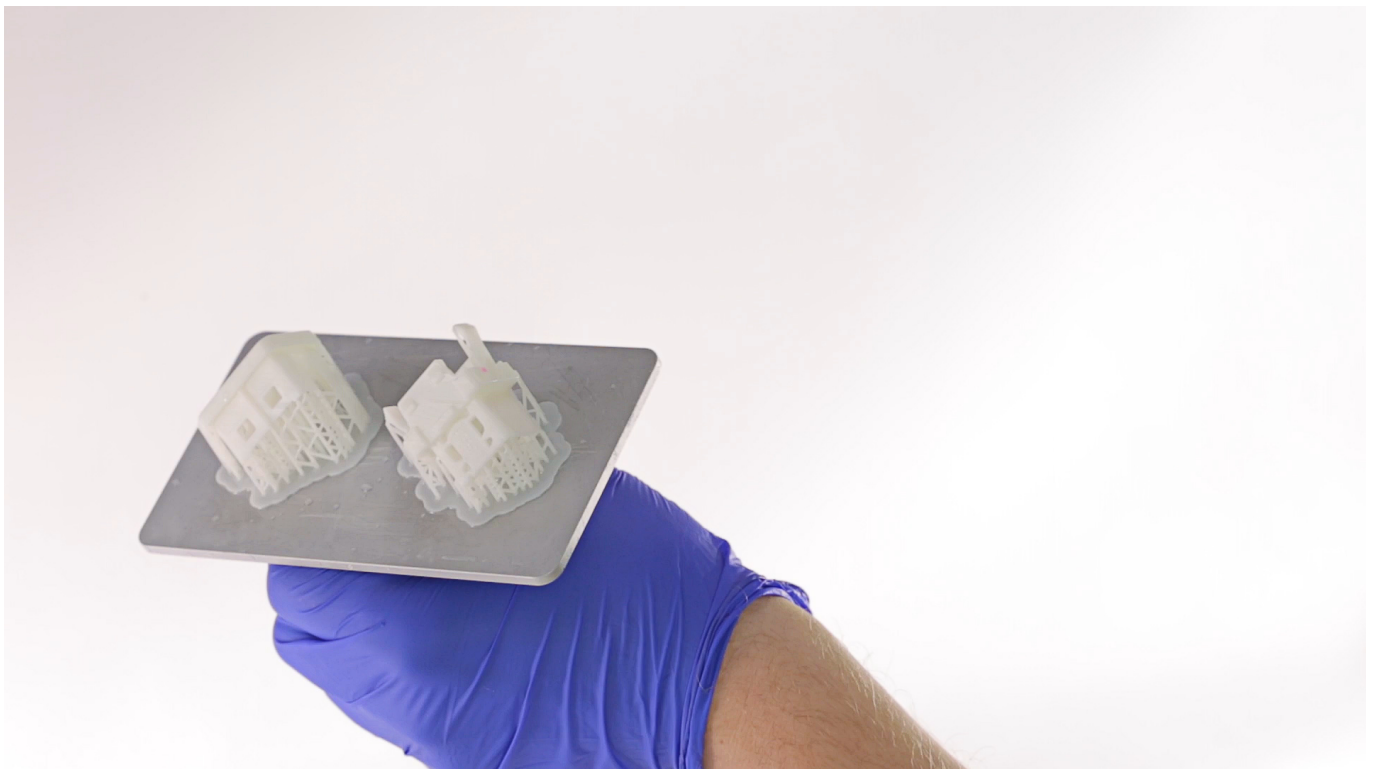


Use compressed air to remove liquid remains from the model.

## Cleaning Box

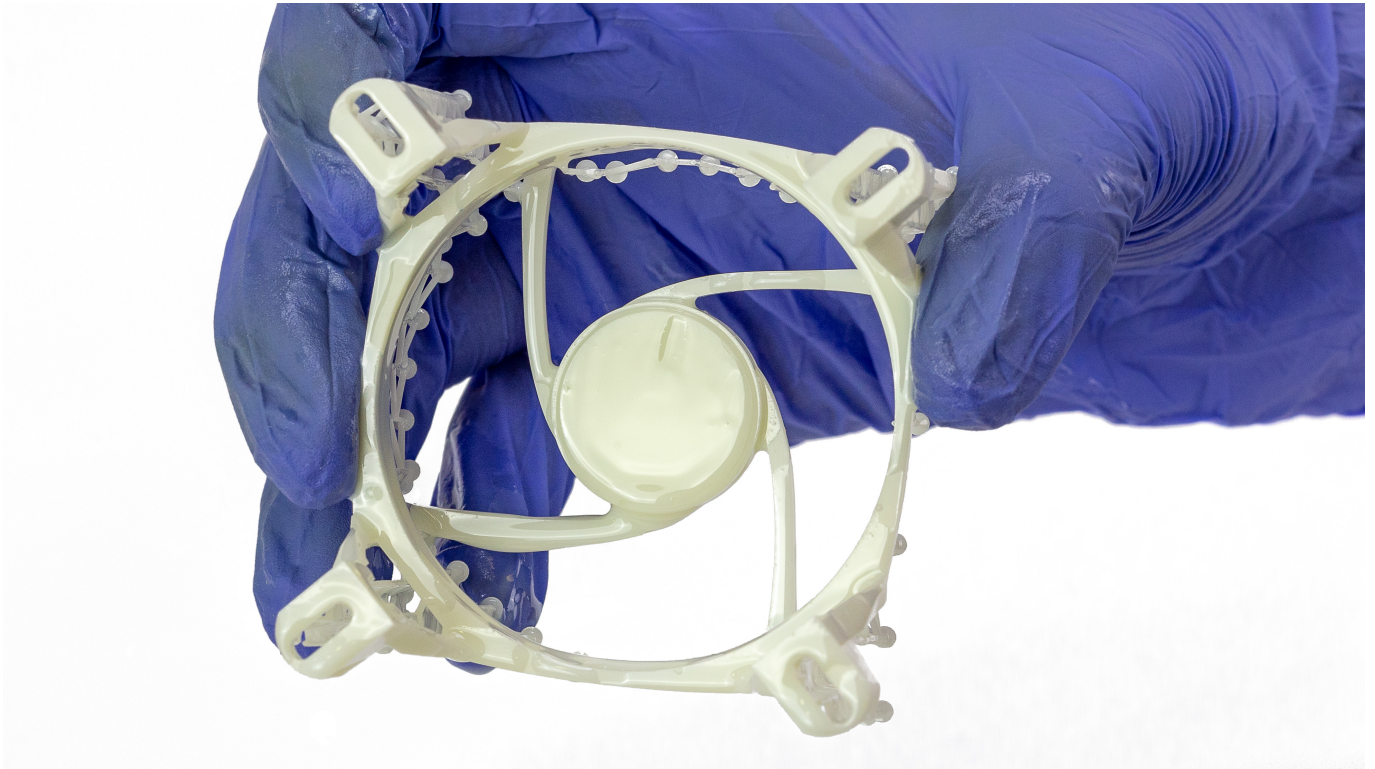


Remove the model from the platform.

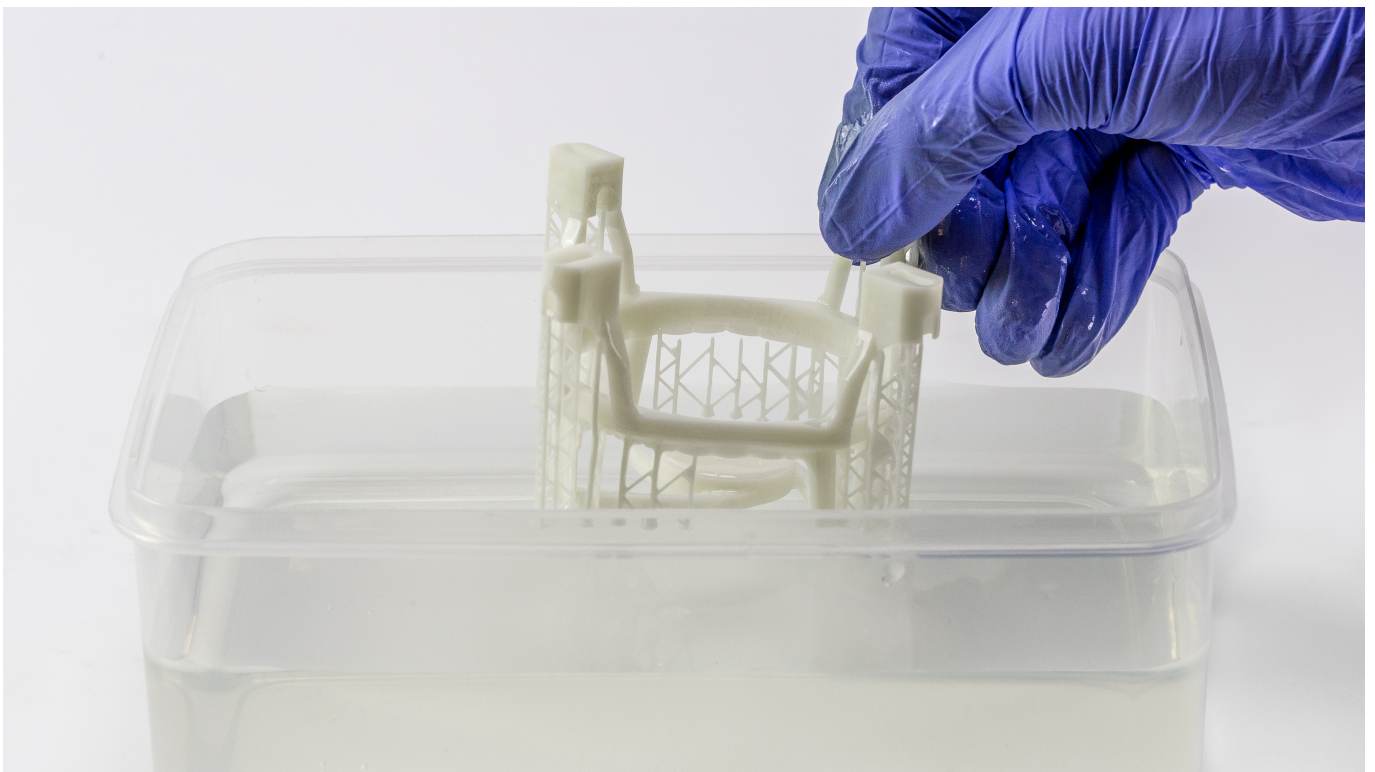


Fill up the cleaning box with a liquid detergent (isopropyl alcohol can be used). Put the

model in the box.

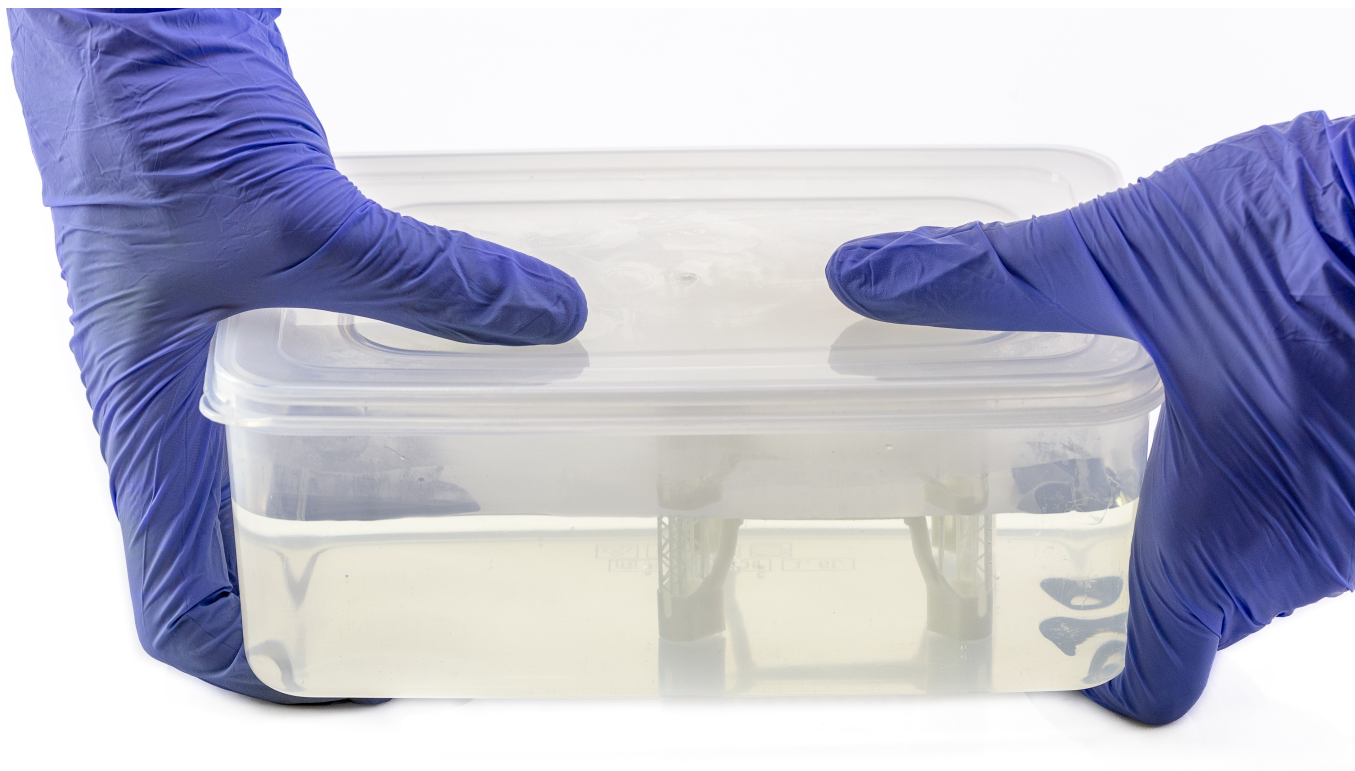


Clean the model from liquid resin by slightly shaking the box.


Be careful not to spill the liquid.

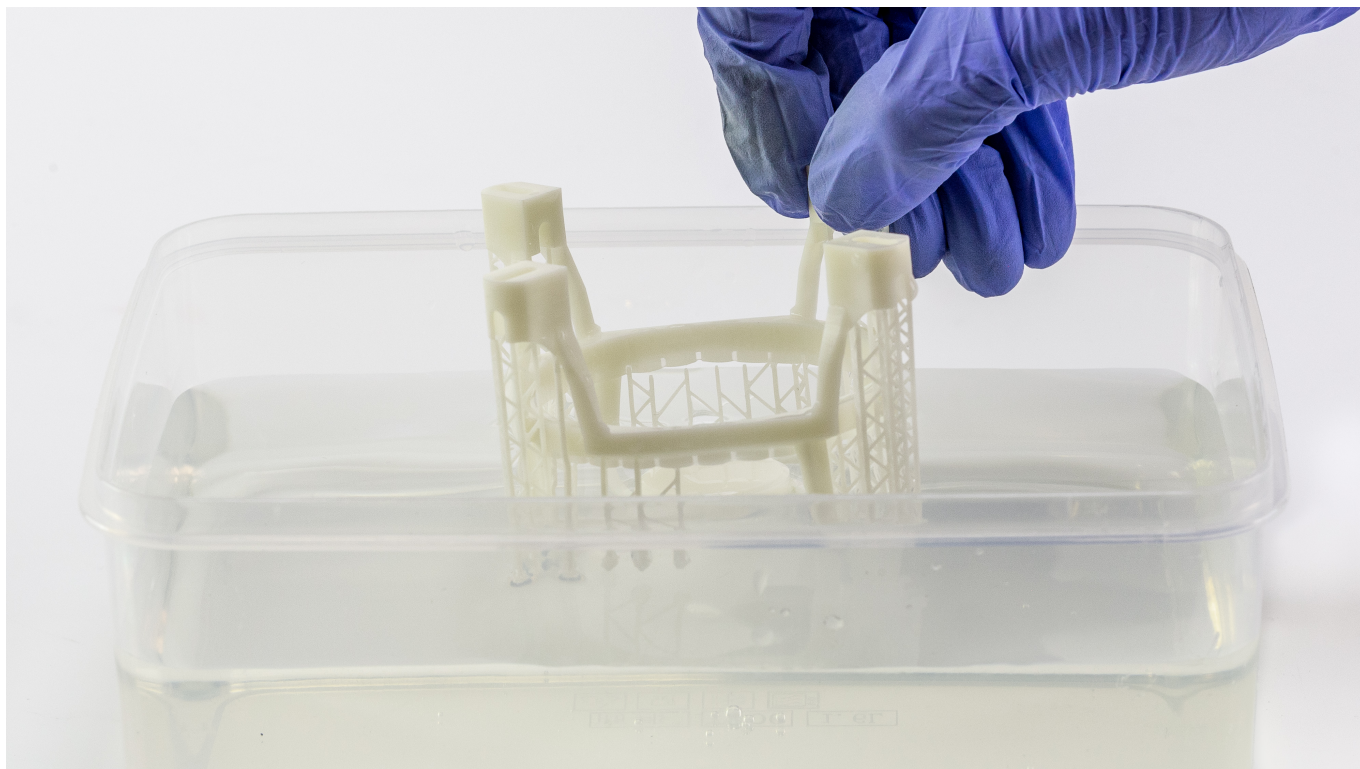

Remove the model from the box and protect it from UV light until it is dry.

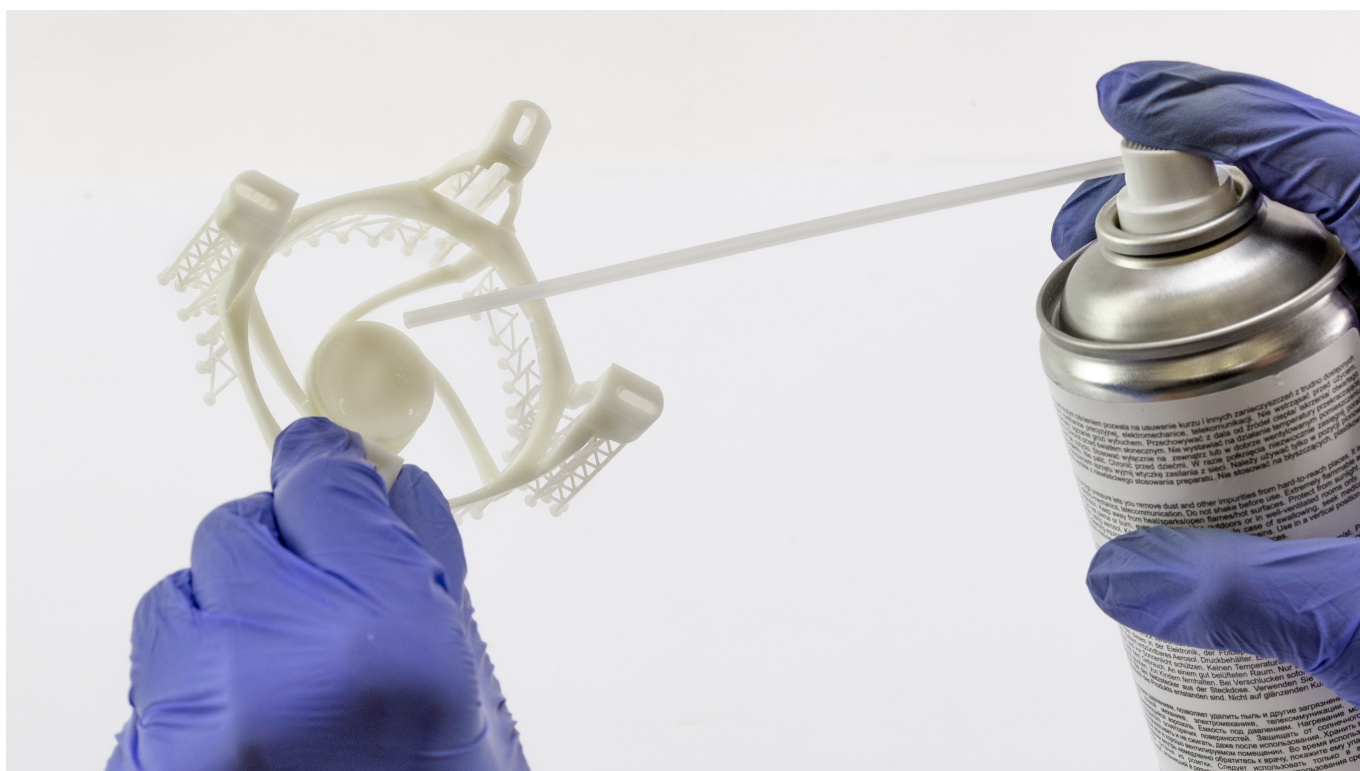

Use compressed air to remove liquid remains from the model.

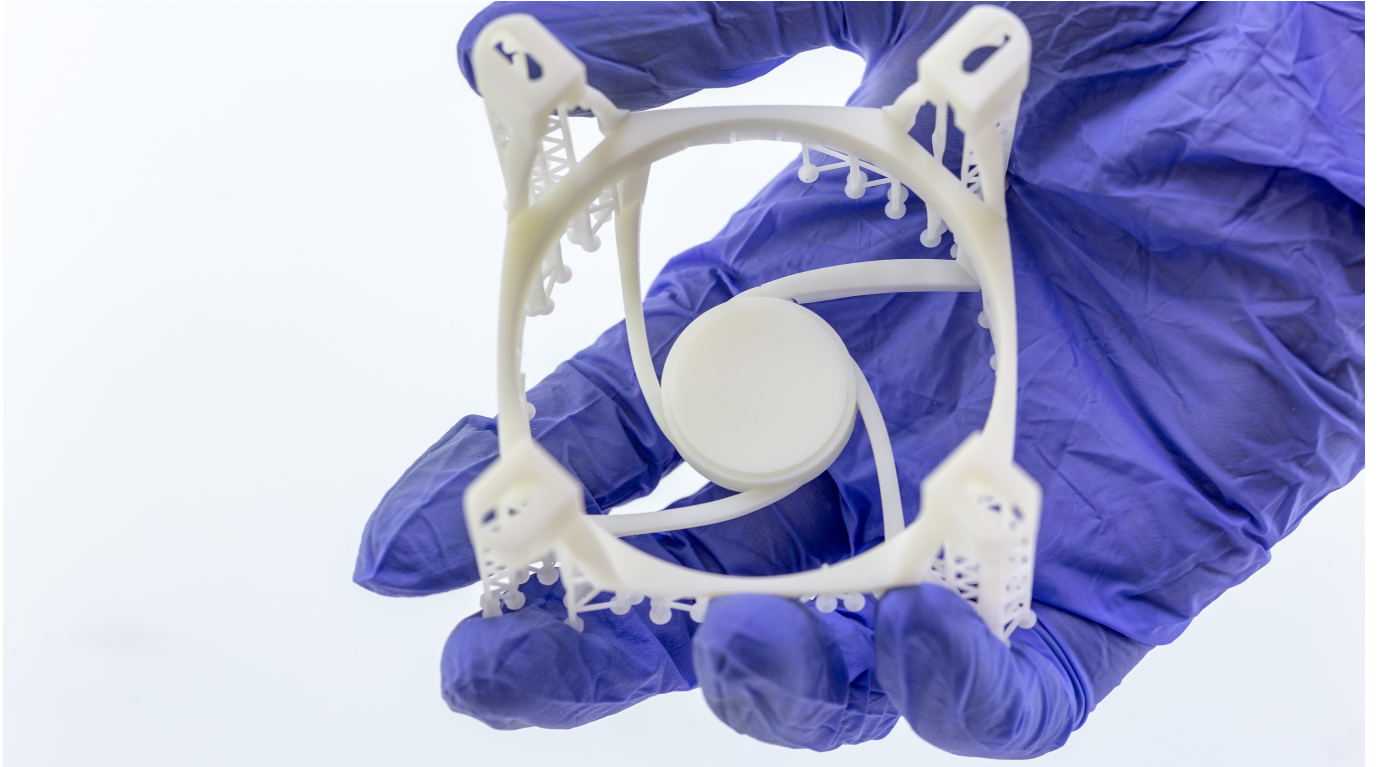

Leave the model to air dry. The model can be cured in UV light once it is completely dry.